





Step 1: Have clean surface prepared! Start by measuring & positioning decal on window, secure with auto masking tape laid out in a vertical line. This way you can apply half of the graphic at a time, starting from the center.

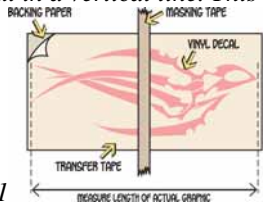


#1

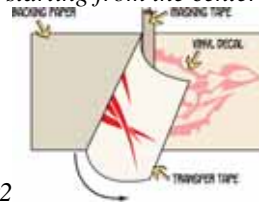


#2

Step 2: The decal will be visible thru the backing paper and should be right-read. SLOWLY separate and peel the protective backing paper from the transfer tape which carries the graphic. (keep an x-acto knife handy, as you may need it to help lift away edge of graphic from backing paper in areas)

Step 3: Cut away exposed part of transfer film, (be careful because adhesive side of graphic is exposed and ready to stick!)

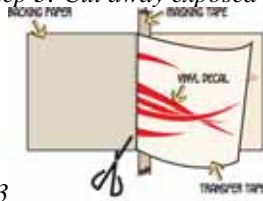


#3

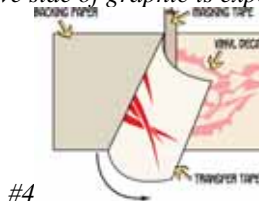


#4

Step 4: Slowly fold backing paper with exposed graphic back towards it's position on window and begin to lightly rub down vinyl EVENLY from CENTER, from top to bottom until you reach the end. This is your big opportunity to avoid bubbles.

Step 5: Rub down firmly with fingers. Final rub down will be with a credit card, after entire vinyl decal is on the window.

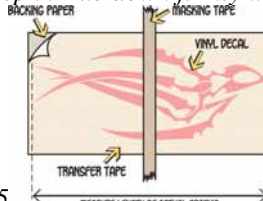


#5

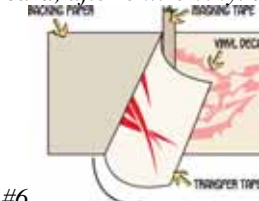


#6

Step 6: With the left side now stuck to window, you can now remove masking tape. Fold back other side and begin removing backing paper.

Step 7: SLOWLY and carefully begin rubbing down FROM the CENTER the remaining graphic.

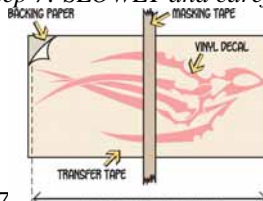


#7

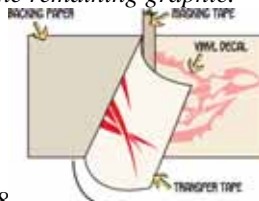

#8

Step 8: Now use credit card, to slowly but firmly burnish graphic onto window, so that transfer tape will separate from graphic.

Step 9: SLOWLY pull away remaining transfer tape at a sharp angle, (because it will want to resist!)

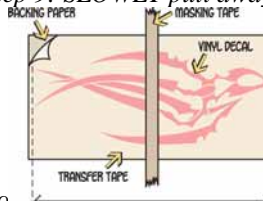

#9



#10

Step 10: Finishing Touches: You may get a bubble no matter how slow or careful you are. Not to worry! Prick the bubble with a pin or x-acto knife with surgical precision. Use left-over piece of backing paper to shield your vinyl from direct contact with burnisher to rub out bubble or even out crease.